

ELECTRO INDUSTRIES - FIELD SERVICE BULLETIN

Bulletin Number 1076 Date 04/16/02
Revision A – 6/3/2002

Product Name All WarmFlo II Products, Controllers, Handheld, etc.

Effected Product Model Numbers:

All WarmFlo II Products using large controller board.

ARL # -- through --

Production Date 04/16/02 through --

FIELD INFORMATION

Background

Subject – standby 5-minute safety reset function.

Reference – PowerPoint Sequence of Events, CT 09, slide 8.

- Installation manual HI320, page 28 “SB (GAS) 5-Minute Safety”

Information – the WF analyzer, PC software, and Palm software have been revised to allow a field disable for this function. The factory default is still the active 5-minute timeout, requiring 90° supply temperature after 5 minutes. With this Handheld or Palm function the 5-minute test can be disabled.

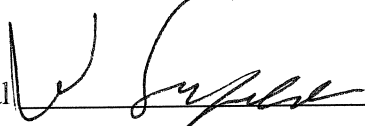
There is a new monitor screen with text: SB RESET ENABLE/DISABLE

Specifically on the Handheld the user presses the down arrow key to move the cursor to this function, then the left/right arrow selects either disable or enable. Completing the task with a SHIFT and SAVE will remove the standby 5-minute timeout reset function.

Configuration requirement – the hardware must have the proper updated firmware program chip.

- WarmFlo II board itself – Version 2.21, 4/16/02
- WF Analyzer – Version 3.1, 4/16/02
- PC Software – Version 2.1, 4/16/02
- Palm Software – Version 1.1, 4/16/02

On 4-30-02 the 90° was changed to 80°, version 2.21 remains the same.

Approval  Date 6-3-02